




E U R E K A
C O L D W A T E R S P A S

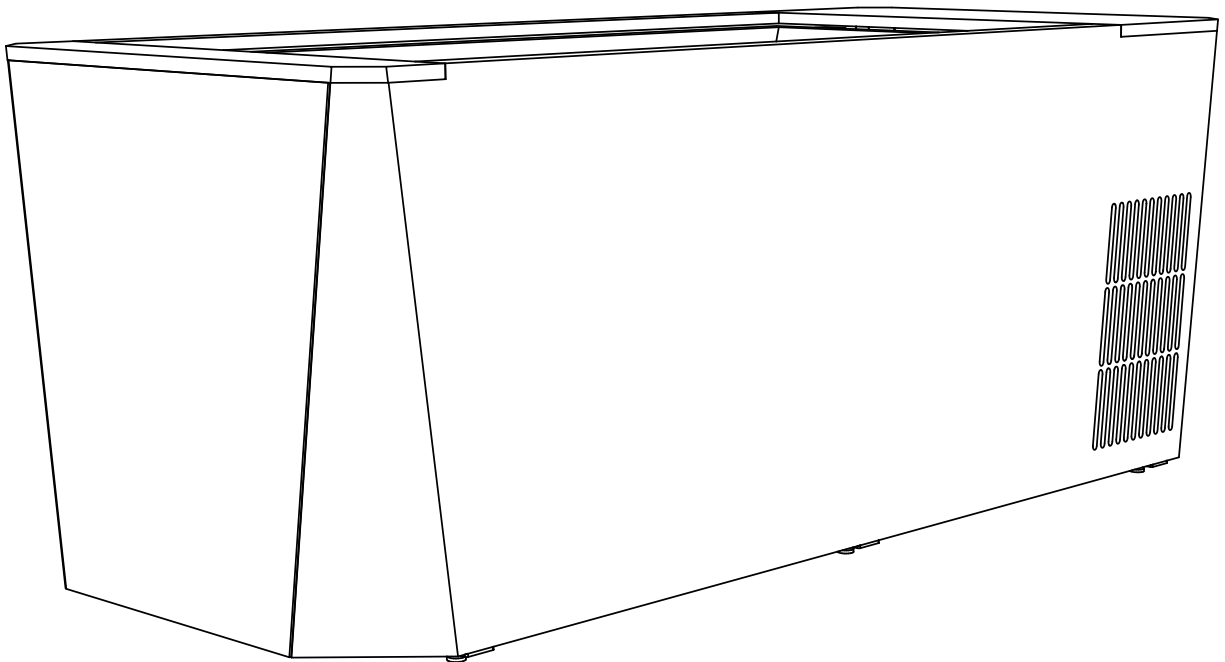

cold water immersion tub
OWNER'S MANUAL

CONTENTS

1.	PRECAUTIONS AND WARNINGS	3
2.	DIMENSIONS	7
3.	ACCESS PANELS	8
4.	PLACING YOUR EUREKA COLD TUB	9
5.	COMPONENTS	11
6.	FILLING YOUR TUB FOR THE FIRST TIME	14
7.	CARE & MAINTENANCE	15
8.	TROUBLESHOOTING	18
9.	SPECS & PARTS LIST	21
10.	WARRANTY & CONTACT INFO	23

PRECAUTIONS & WARNINGS

IMPORTANT SAFETY INSTRUCTIONS. READ AND FOLLOW ALL INSTRUCTIONS:

⚠ WARNING: CHILDREN SHOULD NOT USE COLD WATER TUBS WITHOUT ADULT SUPERVISION.

⚠ WARNING: DO NOT USE COLD WATER TUBS UNLESS ALL SUCTION GUARDS ARE INSTALLED TO PREVENT BODY AND HAIR ENTRAPMENT.

⚠ WARNING: PEOPLE USING MEDICATIONS AND/OR HAVING AN ADVERSE MEDICAL HISTORY SHOULD CONSULT A PHYSICIAN BEFORE USING A COLD WATER TUB.

⚠ WARNING: PEOPLE WITH INFECTIOUS DISEASES SHOULD NOT USE A COLD WATER TUB.

⚠ WARNING: TO AVOID INJURY, EXERCISE CARE WHEN ENTERING OR EXITING THE COLD WATER TUB.

⚠ WARNING: DO NOT USE DRUGS OR ALCOHOL BEFORE OR DURING THE USE OF A COLD WATER TUB TO AVOID UNCONSCIOUSNESS AND POSSIBLE DROWNING.

⚠ WARNING: PREGNANT OR POSSIBLY PREGNANT WOMEN SHOULD CONSULT A PHYSICIAN BEFORE USING A COLD WATER TUB.

⚠ WARNING: LOW WATER TEMPERATURES CAN BE INJURIOUS TO YOUR HEALTH IN CERTAIN CIRCUMSTANCES. CONSULT A PHYSICIAN BEFORE USING A COLD WATER TUB.

⚠ WARNING: BEFORE ENTERING THE COLD WATER TUB, MEASURE THE WATER TEMPERATURE WITH AN ACCURATE THERMOMETER.

⚠ WARNING: DO NOT USE A COLD WATER TUB IMMEDIATELY FOLLOWING STRENUOUS EXERCISE.

⚠ WARNING: PROLONGED IMMERSION IN A COLD WATER TUB CAN BE INJURIOUS TO YOUR HEALTH.

⚠ WARNING: DO NOT PERMIT ELECTRIC APPLIANCES (SUCH AS A LIGHT, TELEPHONE, RADIO, OR TELEVISION) WITHIN 1.5M OF THIS TUB.

CAUTION: MAINTAIN WATER CHEMISTRY IN ACCORDANCE WITH RECOMMENDATIONS HEREIN.

PRECAUTIONS & WARNINGS cont'd

CAUTION: COLD TEMPERATURES

Use the temperature adjustment keys to adjust and select a water temperature. Refer to the temperature adjustment instructions in this manual. Always check the temperature of the water before entry with an accurate thermometer.

Recommended time in water is between 0 - 2 minutes.

PROLONGED IMMERSION IN COLD WATER MAY INDUCE HYPOTHERMIA.

The causes, symptoms, and effects of hypothermia may be described as follows: Hypothermia occurs when the body loses heat faster than it can produce it, causing a dangerously low internal temperature. Hypothermia begins as your body temperature falls below 35°C / 95°F

The symptoms of hypothermia include:

Shivering;
Drowsiness and/or lethargy
Involuntary slow, shallow breathing
Slurred speech or mumbling
Weak pulse
Clumsiness
Confusion or memory loss
Bright red, cold skin
Loss of consciousness

THE EFFECTS OF HYPOTHERMIA INCLUDE:

Unawareness of impending hazard
Failure to recognize the need to exit the tub
Physical inability to exit the TUB
Unconsciousness and danger of drowning

△ **WARNING: THE USE OF ALCOHOL OR DRUGS CAN GREATLY INCREASE THE RISK OF FATAL HYPOTHERMIA IN COLD WATER TUBS.**

AVOIDING THE RISK TO CHILDREN

- **WARNING:** To reduce the risk of injury, do not permit children to use this product unless they are closely supervised at all times

DANGER: Risk of Accidental Drowning

- Extreme caution must be exercised to prevent unauthorized access by children. To avoid accidents, ensure that children cannot use this cold water tub unless they are supervised at all times.

PRECAUTIONS & WARNINGS cont'd

AVOIDING THE RISK OF ELECTROCUTION:

- A wire connector is provided on this unit to connect a minimum 8AWG (8.4mm²) solid copper conductor between this unit and any metal equipment, metal enclosures of electrical equipment, metal water pipe or conduit within 5 feet (1.5m) of the unit.

DANGER: Risk of injury

For cord connected units :

1. Replace damaged cord immediately.
2. Do not bury cord.
3. Connect to a grounded, grounding type receptacle only.

DANGER: Risk of Electric Shock.

- Install at least 5 feet (1.5m) from all metal surfaces. As an alternative, tub may be installed within 5 feet of metal surfaces if each metal surface is permanently connected by a minimum 8 AWG (8.4 mm²) of solid copper conductor to the wire connector on the terminal box that is provided for this purpose.
- Do not permit any electrical appliance, such as a light, telephone, radio or television, within 5 feet (1.5m) of tub.

AVOIDING THE RISK OF INJURY:

DANGER: Risk of Injury. The suction fittings in this tub are sized to match the specific water flow created by the pump. Should the need arise to replace the suction fittings or the pump, be sure that the flow rates are compatible.

WARNING: To reduce the risk of injury:

- Prolonged immersion in a cold water tub may be injurious to your health.
- Pregnant or possibly pregnant women should consult a physician before using a cold water tub.
- Before entering a cold water tub, the user should measure the water temperature with an accurate thermometer since the tolerance of water temperature-regulating devices varies.
- The use of alcohol, drugs or medication before or during cold water tub use may lead to unconsciousness with the possibility of drowning.
- Obese persons and persons with a history of heart disease, low or high blood pressure, circulatory system problems or diabetes should consult a physician before using a cold water tub.
- Persons with infectious diseases should not use a tub.
- Persons using medication should consult a physician before using a cold water tub since some medication may induce drowsiness while other medication may affect heart rate, blood pressure, and circulation.
- Do not enter a cold water tub immediately following strenuous exercise.
- To avoid injury, exercise care when entering or exiting the tub.

PRECAUTIONS & WARNINGS cont'd

ELECTRICAL EQUIPMENT:

CONNECT ONLY TO CIRCUITS PROTECTED BY A CLASS A GFCI. A DISCONNECTING MEANS MUST BE INSTALLED WITHIN SIGHT FROM THE EQUIPMENT AND AT LEAST 5 FEET (1.52 M) FROM THE INSIDE WALLS OF THE COLD WATER TUB. USE COPPER CONDUCTORS ONLY

- When using this electrical equipment, basic safety precautions should always be followed including the following:
- A green coloured terminal, or terminal marked G, GR, Ground, Grounding or the international grounding symbol is located inside the supply terminal box or compartment. To reduce the risk of electric shock, this terminal must be connected to the grounding means provided in the electrical supply service panel with a continuous copper wire equivalent in size to the circuit conductors supplying this equipment.
- At least two lugs marked “BONDING LUGS” are provided on the external surface or on the inside of the supply terminal box or compartment. To reduce the risk of electric shock, connect the local common bonding grid in the area of the tub to these terminals with an insulated or bare copper conductor not smaller than No. 6 AWG.
- All field installed metal components such as rails, ladders, drains or other similar hardware within 3 meters/9.84 feet of the tub shall be bonded to the equipment grounding bus with copper conductors not smaller than No. 6 AWG.
- There are no user serviceable parts within the management system. The high voltage can cause injury or death.
- The cold water tub must be hooked up to a Ground Fault Circuit Interrupter (GFCI).
- Use the test button on your GFCI monthly to ensure it is working properly.


UV COMPONENTS:

CAUTION: Radiation of the ultra violet lamp is dangerous if exposed to eyes and/or skin.

CAUTION: The quartz glass tube and UV lamp will stay warm for some time after the device has been switched off. Allow at least 15 minutes to cool before servicing.


DIMENSIONS

TOP

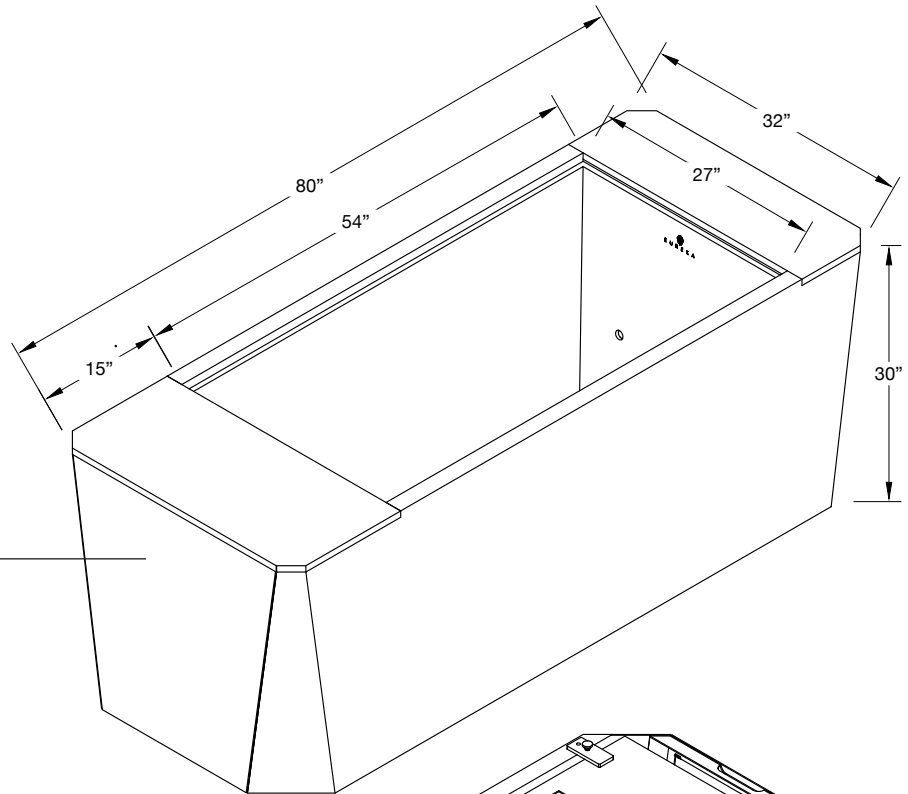

Access Panels
both sides

BOTTOM

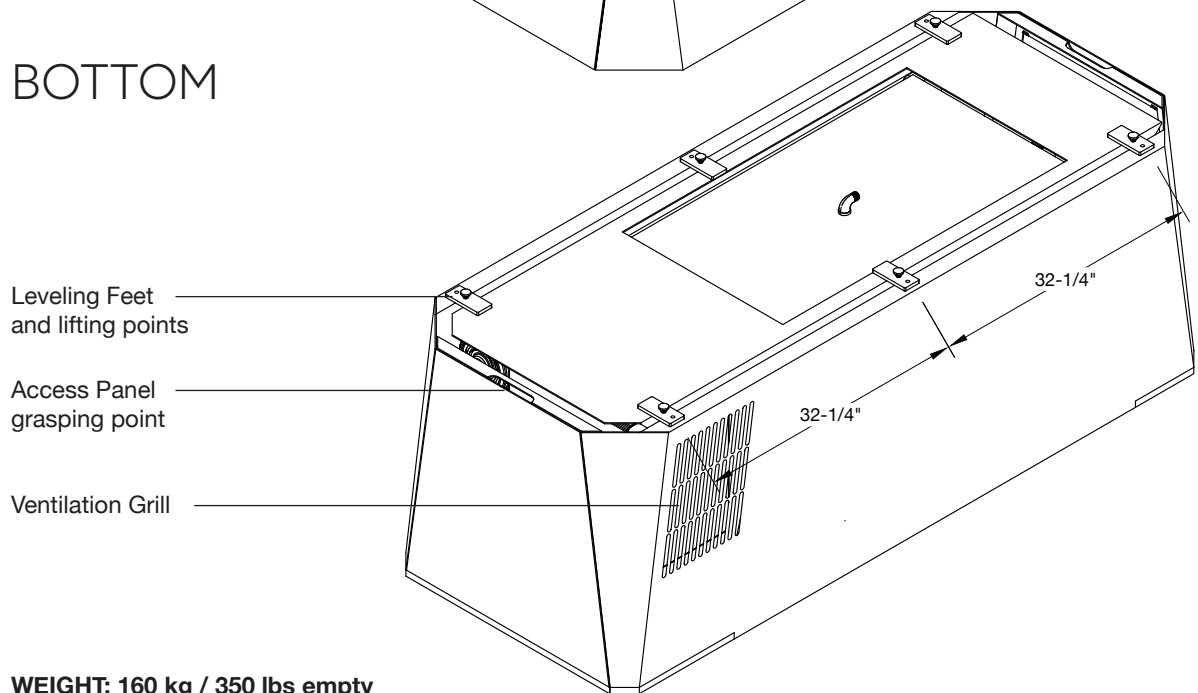

Leveling Feet
and lifting points

Access Panel
grasping point

Ventilation Grill

WEIGHT: 160 kg / 350 lbs empty

ACCESS PANELS


REMOVING AND REPLACING PANELS

For moving and servicing your cold tub, you will need to remove the access panels. The panels are attached using a simple french cleat.

To remove a panel, grasp the centre bottom of the panel with one hand and place your other hand at the top of the panel to support it. Gently lift vertically. The panel will naturally move outward and away from the tub. Once it is free, simply lift the panel away from the tub.

CAUTION - powder-coating can chip. Please place panels on a towel or other protective material.

To replace the panel, angle the top of the panel away from the tub and align the bottom cleats. Once the bottom cleats are engaged, push the top of the panel into place and allow gravity to seat the panel.

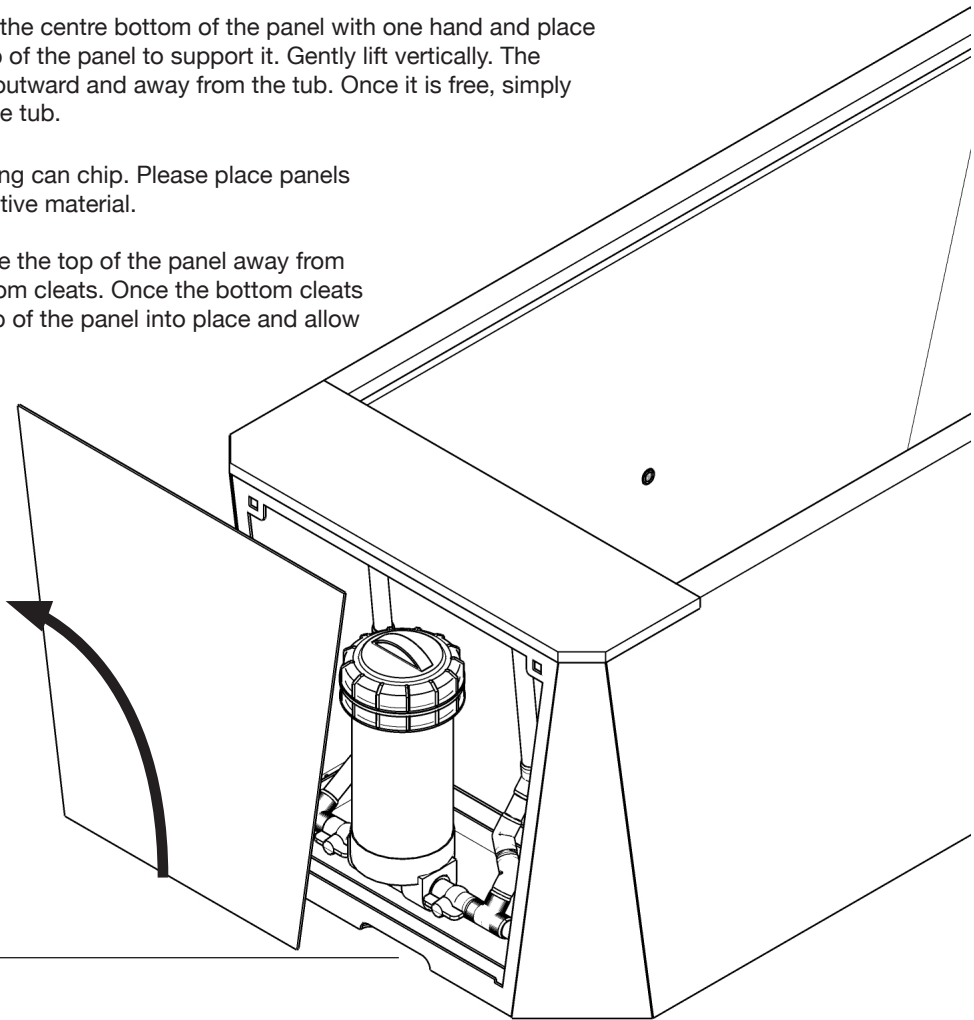

Access Panel grasping point

4

PLACING YOUR EUREKA TUB

ELECTRICAL REQUIREMENTS

This unit requires a dedicated 120 VAC 15 Amp circuit and will draw close to the full rated amperage. No other electrical appliances may be connected on this circuit.

The electrical circuit:

- must be installed and tested by a qualified electrician.
- must power an exterior-rated GFCI receptacle.
- should have the receptacle locate within three feet of the filter end of your tub.
- if you cannot locate the tub within three feet of the receptacle, you may use an extension cord. It must be
 - outdoor rated, heavy duty, and a minimum of 12AWG thickness
 - only as long as is necessary

Do not plug in your tub before it is full of water - doing so may damage the pump.

GROUNDING

This unit must be grounded according to the guidelines on page 6 of this manual.

CHOOSING A LOCATION FOR YOUR COLD WATER TUB

Your new cold tub is designed to function indoors and out and to withstand most weather conditions. For optimal performance, please use the following guidelines when locating your tub:

CAUTION: HEAVY

Choose a level surface that can support the tub's weight.

- When your tub is loaded with water and people, it can weigh 700 kg / 1500 lbs or more, bearing on 6 leveling feet.
- Your floor structure must be engineered to support this weight.

Access panels and ventilation

- Place the unit so that you can open and access the panels on each end.
- Do not block the outlet vent on the side of the unit.

Avoid locations that receive direct sun.

- The less your tub is exposed to heat sources, the more efficiently it will run and the quicker it will reach its target temperature.

cont'd...

PLACING YOUR EUREKA TUB cont'd

cont'd...

Avoid locations that are subjected to falling debris, such as under trees.

- This will reduce the maintenance required to keep your tub clean.

Avoid dusty locations.

- Your tub draws air from below, and dust and loose ground particulate may be pulled into the chiller and increase the possibility of malfunction.

Ensure that your location drains well.

- The internal components need to remain dry—flooding from below may cause failure
- Furthermore, water will collect around the unit from users and from potential condensation. Ensure that water has a way to drain away from the tub.

Other considerations:

- Electrical - per above, place your tub so that the Filter end is close to your power supply
- Water Supply - close proximity to a water supply and/or drain will make emptying and filling the tub easier
- Levelers - your tub is supplied with six leveling feet. Extend them to level the unit, but only as high as is need to achieve level. The less you extend the levelers, the stronger and more stable they will be
- Convenience - try and situate your tub where it is easy to access and service. This will help you in your aim to develop a regular cold-water immersion practice.

MOVING YOUR TUB INTO POSITION

CAUTION: Unit weighs 350 lbs / 160 kg

- Remove end access panels before moving
- Do not lift from ends, i.e. areas under access panels
- If using moving straps, position straps directly adjacent to leveling feet

5

COMPONENTS

FILTER SIDE ACCESS PANEL

1 Ozone Generator

2 Heater

3 Ozone Venturi

4 GFCI Power Bar


5 Temperature Controller

6 Water Filter

7 Filter Valves
(shown in "OPEN" position)


8 Levelers

9 Drain valve

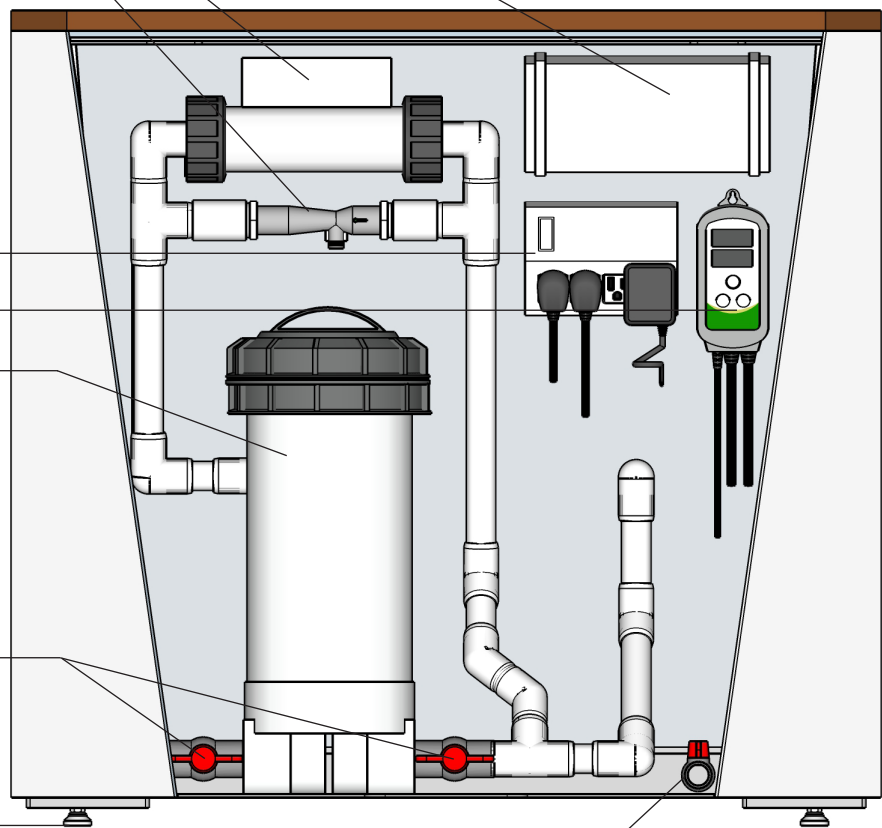


COMPONENTS cont'd

CHILLER SIDE ACCESS PANEL

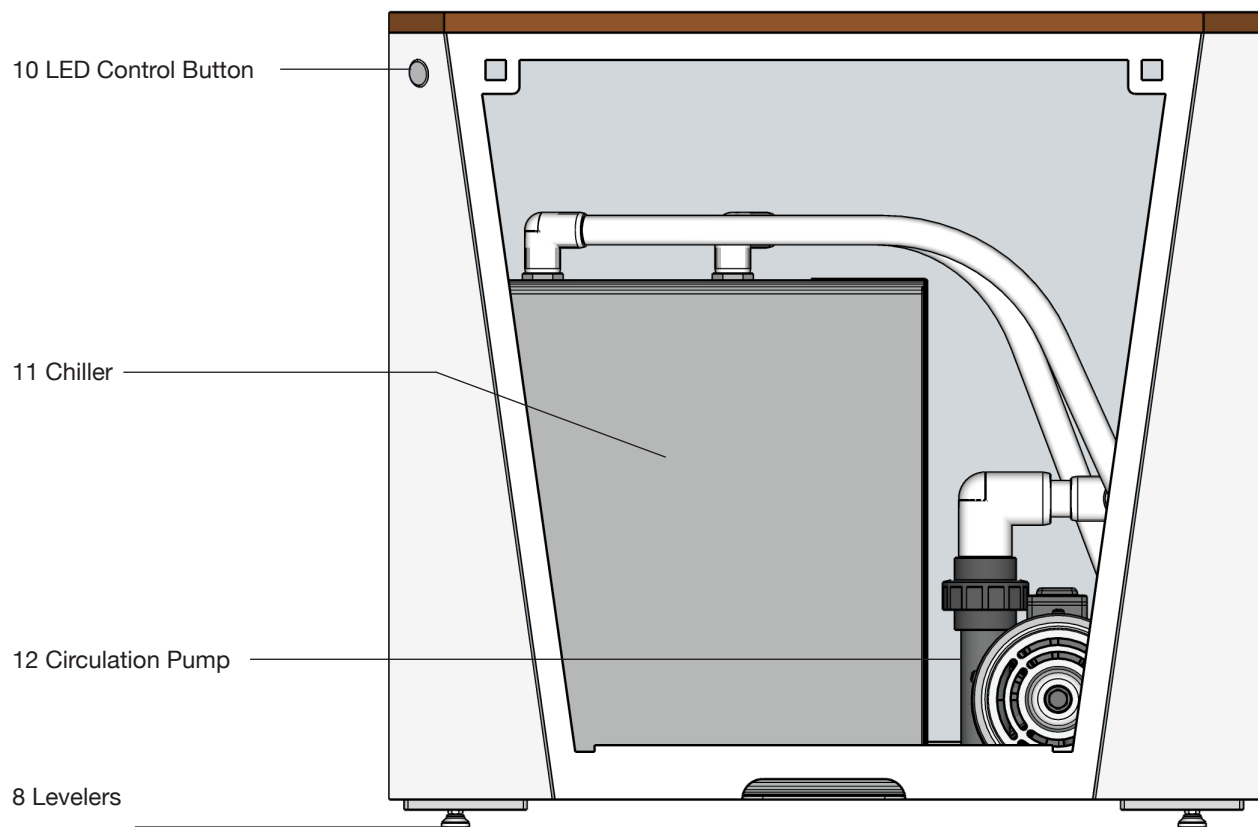

COMPONENTS cont'd

TUB

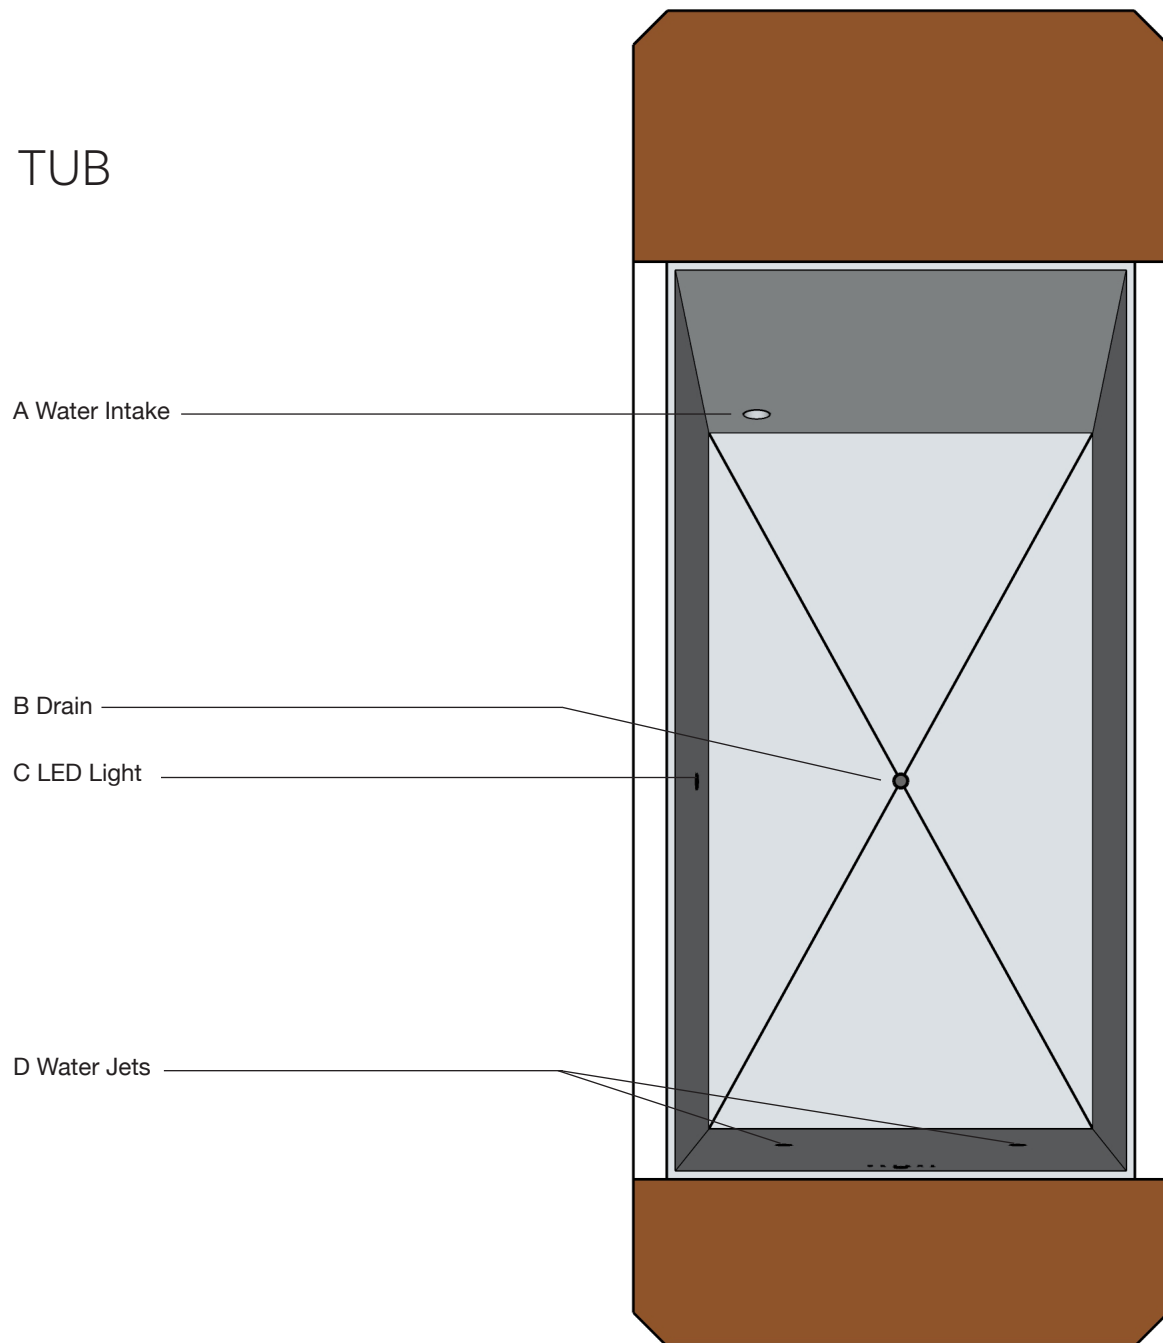

6

FILLING YOUR TUB FOR THE FIRST TIME

BEFORE YOU FILL YOUR TUB

- Remove both access panels.
- During packaging and transport, dust or other debris may have accumulated in the tub. This should be removed prior to filling using a clean dampened cloth. Larger debris can be vacuumed.
- On the Filter side (page 11):
 - make sure that the drain valve (9) is in the closed position and the that the filter valves (7) are open. Note that the OPEN position is when the length of the valve handle aligned with the pipe direction. CLOSED is when the valve handle is perpendicular to the pipe.
 - make sure that the top of the filter housing is tight
- Check that the hair trap is in place in the water intake (page 13, A)

FILLING

1. If you are using a garden hose to fill your tub, run water through the hose for one minute to clean the hose and purge any contaminants.
2. Install the included inline water filter onto the hose and gently place the hose into the bottom of the tub.
3. Turn on the water. Fill the tub up to about 6" from the top of the stainless steel edge.
4. Once the tub is full, turn off the hose and remove it.
5. Plug in the unit. The pump will turn on and water will begin to flow. Initially, there will be air in the system that will bleed out in a few minutes.

PRE-PLUNGE SYSTEM CHECK

INKBIRD TEMPERATURE CONTROL (page 11, 5)

- The temperature control is set 7°C (45°F). To change the set point, depress the SET button for 3 seconds. Adjust the temperature using the arrow keys, then press and hold the SET button again for 3 seconds.
- If you wish, download the InkBird app which will allow you to control monitor your tub temperature via WiFi, from a smart phone or tablet. Go to: <https://inkbird.com/pages/app-download>

CHILLER (page 12, 11)

- On the Chiller control panel, we recommend using the Boost function at all times. Press and hold the BOOST button until the 24/7 LED indicator is lit.

LED LIGHT CONTROL (page 12,10)

- The LED is controlled by a simple on / off button which glows when the tub is powered up.

Replace the panel covers on the correct sides--they are marked FILTER and CHILLER. Cover your tub with the insulated lid and allow your tub to reach its target temperature. The chiller (and heater, when applicable) will cycle on and off to maintain your tub within 2 degrees of your set point.

PLUNGE!

CARE & MAINTENANCE

MAINTAINING YOUR WATER QUALITY

Your Eureka Cold Water Tub is equipped with a high-capacity filter and an ozone disinfection system. Though it is possible to use your tub without the use of chemicals, we recommend using a water disinfection program similar those used with swimming pools and jacuzzis.

The most straight-forward and effective method to tailor your water program is to take a sample of your water to a local pool and spa supply store for an analysis. They will then be able recommend the chemicals, testing and dosing protocol for your specific needs. If you do not have easy access to a pool supply store, please contact us for assistance.

GENERAL CLEANING

AFTER USE:

- Clean your hair trap. Pull out the hair trap at the Water Intake (page 13, A) and remove any hair and debris.
- Use a small pool skimmer net as necessary to remove any floating particulate.

TUB EXTERIOR

- The seat decks are made of Frogboard, a recycled material that is water and UV-resistant.
- The tub body is finished with durable, exterior powder-coat
- Both can be washed as necessary with a soft cloth using warm water with a mild detergent.
- If desired, Frogboard may be finished with a wood finish of your choosing.

FILTER CARE

Check your filter every 50 plunges or if you notice a substantial decrease in water flow. To check the filter:

- Power down your tub using the switch on the Power Bar (page 11, 4)
- Close both of the filter valves (page 11, 7)
- Unscrew the filter lid by turning it in the clockwise direction. It will be tight.
- Remove the pleated filter cartridge--the filter housing will be full of water--and visually inspect it.
- If the filter is visibly dirty, it needs to be cleaned.
- Keeping track of the number of plunges between filter cleanings will allow you to set your own schedule for filter maintenance.

CLEANING YOUR FILTER

- Using a garden hose, spray down the filter, focusing on the areas between the pleats
- For stubborn dirt, soak the filter over night in vinegar or a filter cleaning solution, then rinse thoroughly
- Install the clean filter by placing it into the housing. Thread the filter lid back on and turn it clockwise until hand-tight. The grey locking tabs must be locked into place.
- Open the filter valves and turn power on

CARE & MAINTENANCE cont'd

CHANGING YOUR WATER / DRAINING YOUR TUB

We recommend changing the water in your tub every three months or less. Water conditions will vary and may necessitate more frequent water changes. Once the tub it can be cleaned with a mild detergent and sanitized as desired. Make sure that the tub is thoroughly rinsed before refilling.

The Eureka Cold Water Tub has an integrated bottom drain (page 13, B) and drain valve (page 11, 9). The procedure for draining the tub is as follows:

1. Turn off the tub power at the Power Bar (page 11, 4)
2. Connect a standard garden hose to the drain valve (page 11, 9)
3. Place the outlet end of the garden hose in a drainage location that will accommodate 115 gallons of water - preferably on a down-slope from the tub
4. Open the drainage valve
5. When the tub is empty, close the drain valve
6. If you are washing your tub, keep the hose attached until you have finished this process
7. Close the drain valve and disconnect the hose. Be sure to lift the end of the hose as you detach it to avoid allowing the hose contents to backflow and spill

VACATION INSTRUCTIONS

For extended absences, we recommend draining your tub, disconnecting the power and covering it.

This said, the Eureka Cold Water Tub can be left operating in your absence:

- Top up the water level before you leave.
- Set the temperature at 4°C (40°F) or lower. This will inhibit bacterial growth.
- Cover the tub.
- If you can, have someone check on the tub every 1-2 weeks to check the water level and operation.

WINTER PRECAUTIONS

Your tub can be left operating in sub-zero (sub-32°F) ambient temperatures as the inline heater will keep the water from freezing in the system. However, the system cannot be left filled with water if the unit is off or inoperable during freezing temperatures such as during times of extended power outages or winter absences.

If there is any risk of freezing, please follow the instructions in the following sections.

CARE & MAINTENANCE cont'd

WINTER SHUT-DOWN PROCEDURES

EUREKA COLD WATER SPAS LTD. IS NOT RESPONSIBLE FOR NEGLECT DURING FREEZING TEMPERATURES, WHICH IS BEYOND THE CONTROL OF ANY MANUFACTURER. IF POWER IS OUT DURING FREEZING TEMPERATURES, YOU MUST TAKE ACTION TO PROTECT YOUR HOT TUB AND ITS EQUIPMENT, JUST AS YOU WOULD WITH YOUR VEHICLE, OR YOUR HOME AND PROPERTY.

WATER FREEZING IN THE TUB'S CIRCULATION SYSTEM CAN CAUSE CATASTROPHIC EQUIPMENT DAMAGE.

If the tub must be left for extended periods of time in freezing ambient temperatures, without anyone to check on it or maintain it; or if the tub is to be turned off for extended periods under freezing conditions, you must do the following:

(Note: if you are unable to perform or are unsure about any of the following, please contact a qualified hot tub technician for assistance.)

1. Unplug the tub.
2. Drain the tub per the instructions on page 16.
3. Remove the filter from the housing, clean, and allow to dry. Store it in a clean, dry place.
4. Open both filter valves (p11, 7).
5. Unthread both pipe unions connected to the top of the chiller.
6. Using a wet-dry vacuum, suck all water from:
 - chiller
 - pipes disconnected from the chiller
 - filter housing

You will need to create a good seal between the vacuum hose end and each item from which you are removing water.

EXTENDED POWER OUTAGES DURING FREEZING TEMPERATURES

In most communities, power is restored relatively quickly. But in the event of a prolonged power outage, first unplug the tub. When power is restored, reconnect your tub and restore its function per page 14. Power outages may cause temperature settings to reset.

If there is the possibility that a power outage may result in water freezing in the system, due to the combination of duration and/or severe cold, then you must follow the Winter Shut-down Procedure above.

TROUBLESHOOTING

OBSERVED PROBLEM	POSSIBLE CAUSE	REMEDY
When power turns on, nothing happens	<ol style="list-style-type: none"> 1. No power to unit 2. Loose plugs 	<ol style="list-style-type: none"> 1. Ensure unit is plugged in. Reset breakers at panel. Reset GFCI at the outdoor receptacle. Reset GFCI on Eureka power bar. 2. Check the electrical connections at the Eureka power bar
GFCI power bar trips immediately after RESET is pressed	<ol style="list-style-type: none"> 1. Water causing electrical short 2. Short in one electrical component 	<ol style="list-style-type: none"> 1. If filter / electrical compartment interior is wet, leave cover panel off until dry. 2. Unplug all four devices from power bar. RESET power bar GFCI and plug in devices, one at a time.
Pump is running but water is not getting cold	<ol style="list-style-type: none"> 1. Temperature set point is not low enough 2. Chiller power is OFF 3. Chiller set point is too high 4. Loose plugs 5. Low or no water flow 	<ol style="list-style-type: none"> 1. On InkBird control, hold SET for 3 seconds, adjust temperature; hold SET again for 3 seconds 2. Press and hold POWER button on Chiller for 3 seconds until you hear a 'beep' 3. Press SET button on Chiller. Adjust set point to 39°F. Press SET again. 4. Check the electrical connections at the Eureka power bar 5. Ensure valves on either side of the filter are in the OPEN position. Ensure filter is clean.
Reduced water flow	<ol style="list-style-type: none"> 1. Water filter is dirty / plugged 2. Filter valves are closed 3. Hair strainer is plugged 	<ol style="list-style-type: none"> 1. Clean or replace water filter. 2. Ensure valves on either side of the filter are in the OPEN position. 3. Remove and clean hair strainer
I have opened the filter housing to check the filter and there is water coming out of the housing	<ol style="list-style-type: none"> 1. Filter valves are open 	<ol style="list-style-type: none"> 1. Close both valves that straddle the filter.
I have closed the filter housing and opened the valves and now water is leaking out of the filter housing	<ol style="list-style-type: none"> 1. O-ring has not seated 	<ol style="list-style-type: none"> 1. Re-open the housing. Check the black o-ring in the housing lid to ensure it is not broken and that it completely seated in the groove. Turn the locking ring clockwise until the tabs are aligned, then push tabs into the lock position.

TROUBLESHOOTING cont'd

OBSERVED PROBLEM	POSSIBLE CAUSE	REMEDY
Ozone bubbles are no longer visible	<ol style="list-style-type: none"> 1. Water filter is dirty / plugged 2. Ozone check valve is stuck 3. Ozonator tube is kinked 	<ol style="list-style-type: none"> 1. Clean or replace water filter. 2. There is a small check valve on the blue tubing. Power down the cold tub. Remove the check valve and blow air through it from both directions until it only allows air to pass in one direction. Re-install. 3. Check the blue tubing and remove any kinks.
Water is leaking from the below the unit.	<ol style="list-style-type: none"> 1. Condensation 2. Leak at Chiller 3. Leak at Heater 4. Leak at Pump 5. Leak at Filter housing 6. Non-specific plumbing leak 	<ol style="list-style-type: none"> 1. If you live in a humid environment, it is possible condensation will drip off the pipes inside your unit. If there is no loss of water from the tub, then this is the likely cause. 2. Hand tighten to eliminate leaks. If necessary, tighten using channel-lock pliers, but do not over-tighten. 3. Tighten the unions on both sides of the heater. 4. Tighten the pipe unions at the pump using channel-lock pliers, but do not over-tighten. 5. If the filter is leaking at the air purge button, press and release it rapidly 4 or 5 times until the leak stops. If the leak is at the lid, ensure the lid is pushed in straight, o-ring is in place, the locking is ring screwed down fully, and locking tabs are in position. Take pictures of the leak and contact our technical support for assistance.
Ozone generator light does not come on	<ol style="list-style-type: none"> 1. Ozone timer is in 'OFF' cycle 2. Ozone UV bulb is burned out 	<ol style="list-style-type: none"> 1. The Ozone generator is set to operate for 6 hours a day, so it will be in its 'OFF' cycle for 18 hours per day. To test the Ozone generator, unplug it from the timer and plug it directly into power. 2. If the Ozone bulb does not light up when connected directly to power, then the bulb is burned out. Please contact us for help.

TROUBLESHOOTING cont'd

OBSERVED PROBLEM	POSSIBLE CAUSE	REMEDY
Breaker at panel trips repeatedly	<ol style="list-style-type: none"> Undersized extension cord Circuit is being shared with other appliances / devices Component failure 	<ol style="list-style-type: none"> Ideally, the cold tub should be plugged directly into the wall receptacle. If you must use an extension cord, it must be outdoor rated, heavy duty, and a minimum of 12AWG thickness The unit cannot work reliably without the full 15 A on the circuit. Unplug any other items if they are on the same circuit. Unplug all four devices from power bar. RESET the breaker at the panel and plug in components, one at a time to see if any of the components cause the trip. If there is a component failure, contact us.
LED Light stops working	<ol style="list-style-type: none"> Loose plug Power adapter failure ON/OFF button failure LED light failure 	<ol style="list-style-type: none"> Check the power adapter plugged into the power bar. Ensure that it is plugged in securely. The LED light button should have a glowing ring around it. If it is not lit after ensuring the power adapter is plugged in properly, the adapter may have failed. Please contact us for help. If the LED light button is not lit after ensuring the power adapter is plugged in properly, the button may have failed. Please contact us for help. If the button is still lit, but the LED does not light, it is possible that the LED light fixture has failed. This is usually characterized by the LED light gradually growing dimmer over time, before failing. Please contact us for help.

SPECS & PARTS LIST

PHYSICAL SPECS

Outer dimensions	80"L x 32"W x 30"h 2032L x 813W x 762H mm
Skin Material	11 ga powder-coated aluminum
Tub dimensions	Opening: 54" x 27" 1372 x 686 mm Depth: 26" 660 mm Bottom: 42" x 23" 1067 x 584 mm
Tub Material	11 ga 316 stainless steel
Seat Material	FrogBoard
Water Capacity	115 gallons 435 litres
Dry Weight	350 lbs / 160 kg
Filled Weight	up to 1325 lbs / 600 kg


MECHANICAL

North American Electrical Standard	120 V, 15 A GFCI Protector Circuit
Chiller	1/2 horsepower 120 VAC 5.4 Amps 4020 BTU/h Minimum temperature 37°F / 2.8°C
Temperature Control	ITC-308 with WiFi capability
Pump	1/8 horsepower 40 gallons per minute 1.3 Amps designed for 24h use
Filter	Top-load housing Washable, pleated cartridge filter 25 square foot filter area
Ozonator	35 milligrams/hour up to 800 gallon capacity 120 VAC
Heater	1.5 kW 120 VAC
LED Light	316 SS housing 1800 Lumens 27 W Multi-color

PARTS (see next page)

1	Chiller
1a	Chiller control panel
2	Pump
3	Chassis
4	Tub
5	LED light
6	Heater
7	Ozone venturi
8	Ozonator
9	Power bar
10	Filter housing
10a	Filter lid
11	Filter valves
12	Drain valve
13	LED control button (not shown)

SPECS & PARTS LIST cont'd

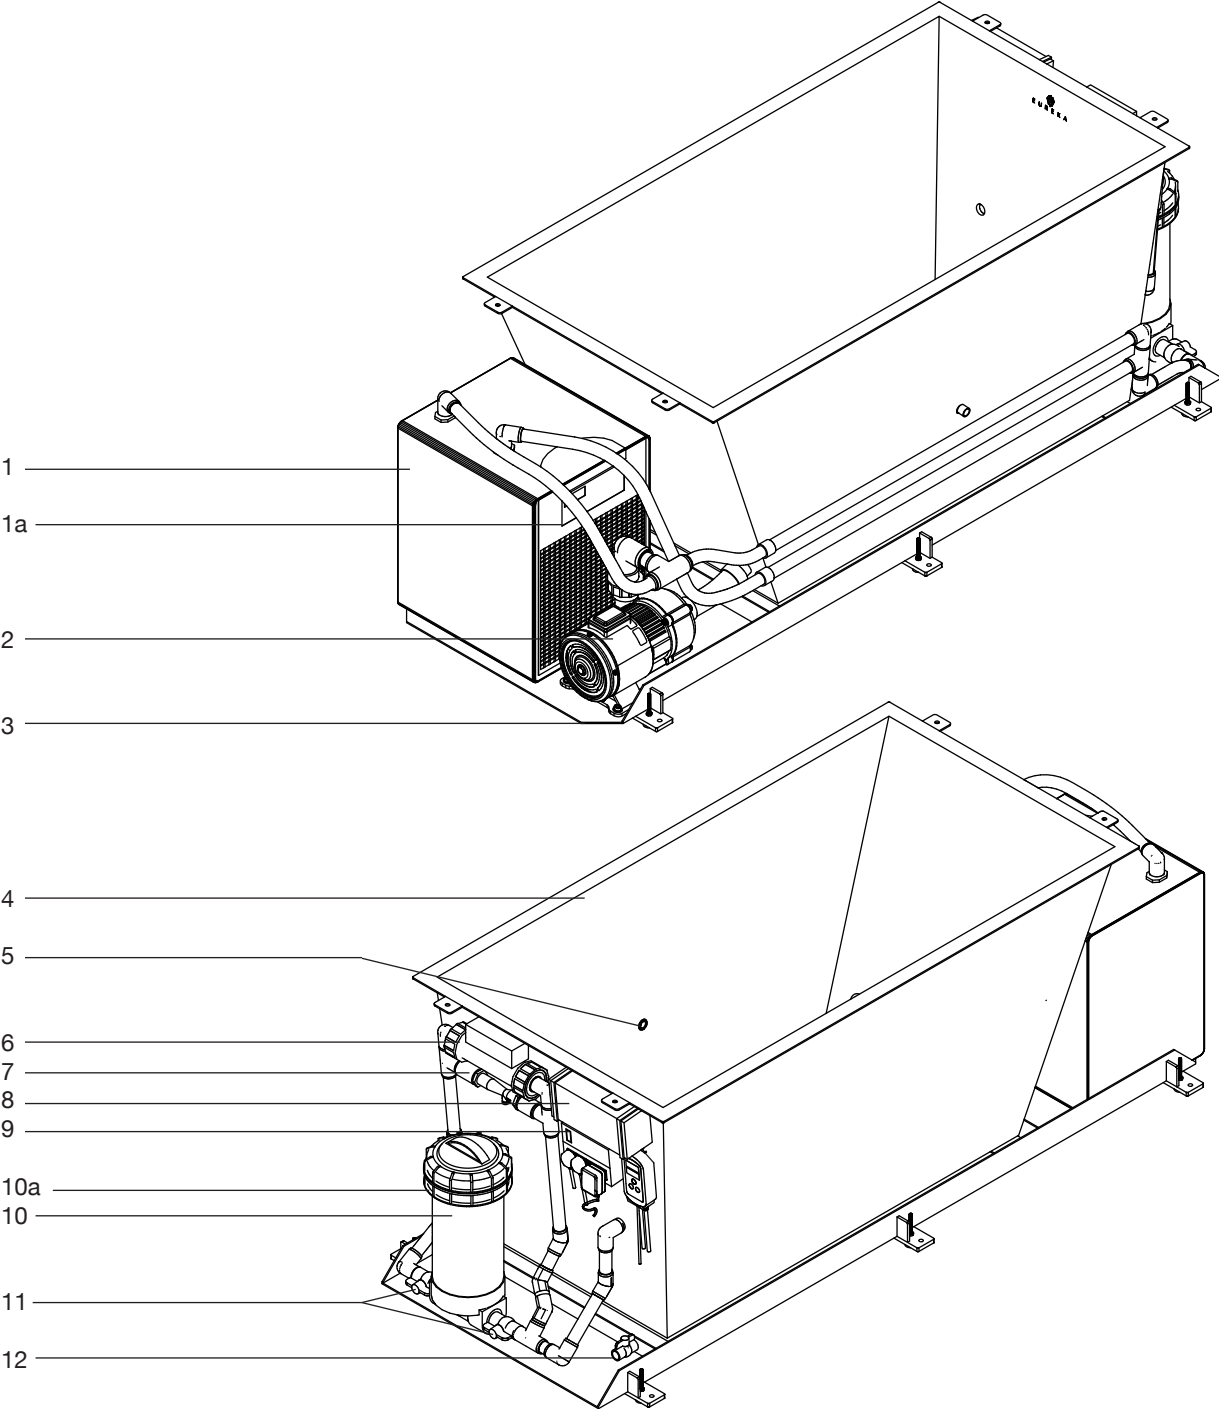

WARRANTY

ONE-YEAR WARRANTY

At Eureka Cold Water Spas, your delight and satisfaction with your cold water tub is our highest priority. If there is an aspect of your tub that does not live up to our promise, we will work with you to make it right.

This product is warranted to the original owner, subject to proof of purchase:

Eureka Cold Water Spas Incorporated (“Eureka”) warrants the components and materials in your cold immersion tub (the “appliance”) to be free from manufacturing and material defects for a period of one year from date of delivery. During this period, if any of the components manufactured or supplied by Eureka in the appliance are found to be defective in materials or workmanship, Eureka will, at its option, replace or repair the defective components at no charge to the original owner. Eureka will also pay for reasonable labor cost incurred in replacing or repairing such components for a period of one year from date of purchase. Any products presented for warranty repair must be accompanied by a dated proof of purchase.

This Warranty will be void if the appliance is not installed by a qualified installer in accordance with installation instructions. The Warranty will also be void if the appliance is not operated and maintained according to the operating instructions supplied with the appliance, and does not extend to damage due to accident, neglect, misuse, abuse, alterations, negligence of others, including the installation thereof by unqualified installers; incidental or consequential damage. All service work must be performed by a qualified service technician.

This warranty is expressly in lieu of other warranties, express or implied, including the warranty of merchantability or fitness for purpose and of all other obligations or liabilities. Eureka does not assume any other obligations or liabilities in connection with sale or use of the appliance. In provinces or states that do not allow limitations on how long an implied warranty lasts, or do not allow exclusion of indirect damage, those limitations of exclusions may not apply to you. You may also have additional rights not covered in this Warranty. Eureka reserves the right to investigate any and all the claims against this Warranty and decide upon method of settlement. For information about this warranty contact:

Eureka Cold Water Spas Incorporated

